
LASER HEAD: LEE LASER MODEL 708 AND 750

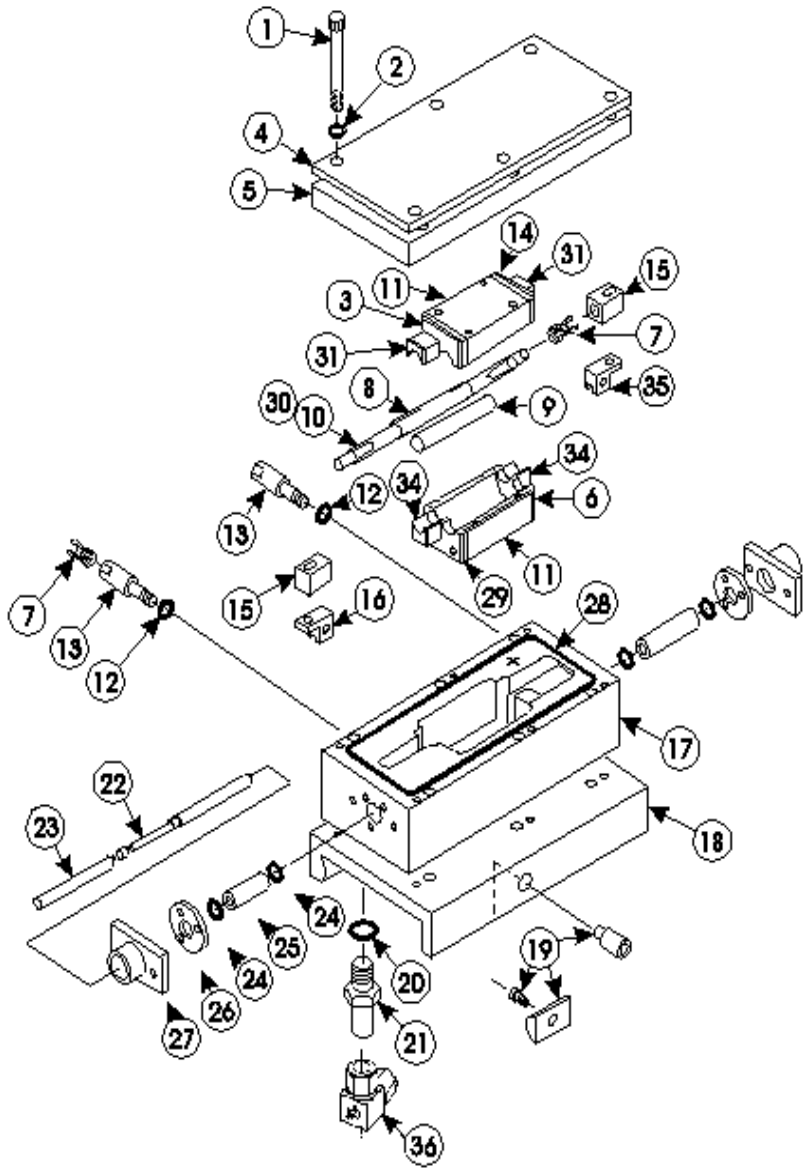

Parts Listed on Drawing

1. Head Bolt, Stainless Steel HB708
2. Head Bolt Washer, Nylon HBW510
3. Upper Cavity Plate, Left CEP708L
4. Aluminum Fin, Head Top FIN708
5. Upper Head Block UHB708
6. Lower Cavity Plate, Left CEP708L
7. Lamp Clip, Gold Plated LC700
8. Lamp Flow Tube, Pyrex LFT708
9. Rod Flow Tube, Pyrex RFT708
10. Laser Lamp LL700

11. Cavity Ellipse, Gold Plated GCE708
12. O-Ring, Silicone(Included in Kit)
13. High Voltage Pin HVP708
14. Upper Cavity Plate, Right CEP708R
15. Lamp Contact Block Assembly LCBA708
16. Lamp Terminal Block(Cathode) LTB708C
17. Lower Head Block LHB708
18. Head Carriage LHC708
19. Locking Screw Assembly LSA708
20. O-Ring, Silicone(Included in Kit)
21. Water Fitting WF013
22. YAG Rod (Crystal Only) YR512
23. YAG Rod Assembly YRA708, YAG Rod Assembly (Laser Tested) YRA708LT
24. O-Ring, Silicone(Included in Kit)
25. Rod Guide RG708
26. Rod End Cap REC708
27. Dust Boot DB708
28. O-Ring, Silicone(Included in Kit)
29. Lower Cavity Plate, Right CEP708R
30. Laser Lamp LL700LC
31. Upper Light Shield ULS708
34. Lower Light Shield LLS708
35. Lamp Terminal Block(Anode) LTB708A
36. Water Fitting WF029